

**GST-C04 Operation Chart** ⊙=Valid X=Invalid

No	Effect Mode		Wave Tap	Momentary Wave	Pedal Volume/Wave		Pedal Depth & Wave Tap	Pedal Speed 1/Wave		Pedal Speed 2/Wave	
	Main	Sub	Wave Tap	Momentary Wave	Pedal Volume	Wave	Pedal Depth & Wave Tap	Pedal Speed 1	Wave	Pedal Speed 2	Wave
	<i>Wave Effect</i>		⊙	⊙	x	⊙	⊙	⊙		⊙	
6	Saturation		⊙	⊙	⊙		⊙	⊙		⊙	
7	Depth		⊙	⊙	⊙ + Depth by Pedal	⊙	⊙	⊙		⊙	
8	Effect Switch		⊙	⊙	⊙		⊙	⊙		⊙	
9	Control Switch		Speed set by tapping	During depression (held/down), Wave	Switch "Pedal Volume"/"Wave"		Speed set by tapping	Switch "Pedal Speed 1"/"Wave" + On/Off of "Bonus Mode"		Switch "Pedal Speed 2"/"Wave" + On/Off of "Bonus Mode"	
4	Expression Pedal		x	x	⊙	x	⊙	⊙	x	⊙	x
10	Pan ON/OFF SW (*1)		⊙	⊙	⊙		⊙	⊙		⊙	
11	Blend ON/OFF SW		⊙	⊙	⊙		⊙	⊙		⊙	
12	Tap/Pedal Setup SW.		Setup Tap speed multiple	x	Setup taper (curve) of Pedal	x	Setup taper (curve) of Pedal	Setup taper (curve) of Pedal	x	Setup taper (curve) of Pedal	x
14	Speed Controller		⊙*2	⊙	x (by Pedal moves)	⊙	⊙*2	x (Speed control by Pedal Position)	⊙	x (Speed control by Pedal Position)	⊙
13	Speed Display LED		Display either BPM or m/sec	←	←*4	←	←	←		←	
15	BPM(BEAT) Indicate LED		Either LED lights	←	←	←	←	←	←	←	←
16	m/sec Indicate LED										
17	Motion Indicate LED		Brinks synchronize to wave	←	←	←	←	←	←	←	←
18	Control Indicate LED		Light during measure tapping speed	Light during depression Contol Switch	Light(default) *3	extinction	Light during measure tapping speed	Light(default) *3	extinction	Light(default) *3	extinction
19	Effect Indicate LED		Light at Effect Activates	←	←	←	←	←	←	←	←
20	Mode Select Controller		⊙	⊙	⊙		⊙	⊙		⊙	
21	Mode Indicate LED		Light at selectable side	←	←	←	←	←	←	←	←
22	Wave Form Indicate LED		Light at selected Wave Form	←	←	←	←	←	←	←	←
23	Effect Mode Indicate LED		Light at selected Effect Mode	←	←	←	←	←	←	←	←

\*1 Invalid, if output is only "A".

\*2 Speed setting is available either Speed Controller or Tapping. But once speed is set, previous setting disappear.

\*3 Even Sub-mode is selected by Control Switch, Main mode (left side) appears at the Change of Effect Mode, as default.

\*4 Although Speed Display indicate, it is void, as showing speed of moves of volume pedal.