

GST-U05 Operation Chart ⊙=Valid ×=Invalid

	Effect Mode	MOMENTARY WAVE		WAVE TAP	PEDAL WAH/TOUCH		PEDAL DEPTH/TOUCH		PEDAL SPEED 1/TOUCH		PEDAL SPEED 2/TOUCH	
		Mode, momentary, Main, Sub	Touch Wah	Wave Wah	Wave Tap	Pedal Wah	Touch	Pedal Depth	Touch	Pedal Speed 1	Touch	Pedal Speed 2
	WAH TYPE	Touch Wah	Wave Wah	Wave Wah	Pedal Wah	Touch Wah	Wave Wah	Touch Wah	Wave Wah	Touch Wah	Wave Wah	Touch Wah
(5)	Filter Mode	⊙		⊙	⊙		⊙		⊙		⊙	
(6)	Threshold	⊙	×	×	×	⊙	×	⊙	×	⊙	×	⊙
(7)	Peak Level	⊙		⊙	⊙		⊙		⊙		⊙	
(8)	Frequency	⊙		⊙	⊙		⊙		⊙		⊙	
(9)	Effect Switch	⊙		⊙	⊙		⊙		⊙		⊙	
(10)	Control Switch	Depress and Hold for Wave Wah (oscillator)		Speed set by tapping	Switch "Pedal Depth"/"Touch"		Switch "Pedal Wah"/"Touch"		Switch "Pedal Speed 1"/"Touch" + On/Off of "Bonus Mode"		Switch "Pedal Speed 2"/"Touch" + On/Off of "Bonus Mode"	
	Expression Pedal	×		×	⊙	×	⊙	×	⊙	×	⊙	×
(11)	Range Select SW.	⊙		⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
(13)	Drive Select SW.	⊙		⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
(14)	Tap/Pedal Setup SW.	×		Setup Tap speed multiple	Setup taper (curve) of Pedal	×	Setup taper (curve) of Pedal	×	Setup taper (curve) of Pedal	×	Setup taper (curve) of Pedal	×
(15)	Speed Control	×	⊙	⊙*1	×	×	⊙	×	×	(Speed by Pedal)	×	(Speed by Pedal)
(14)	Speed Display LED	Display either BPM or m/sec		←	←	←	←	←	←	←	←	←
(16)	BPM(BEAT) Indicator LED	Either LED lights		←	←	←	←	←	←	←	←	←
(17)	m/sec Indicator LED											
(18)	Motion Indicator LED	Brinks syncholonize to wave		←	←	←	←	←	←	←	←	←
(19)	Control Indicator LED	Light during depression Control Switch		Light during measure tapping speed	Light(default) *2	dark	Light(default) *2	dark	Light(default) *2	dark	Light(default) *2	dark
(20)	Effect Indicator LED	Light When Effect is Engaged		←	←	←	←	←	←	←	←	←
(21)	Mode Select Control	⊙		⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙	⊙
(22)	Mode Indicator LED	Light at selectable side		←	←	←	←	←	←	←	←	←
(23)	Wave Form Indicator LED	Light at selected Wave Form		←	←	←	←	←	←	←	←	←
(24)	Effect Mode Indicator LED	Light at selected Effect Mode		←	←	←	←	←	←	←	←	←

*1 Speed setting is available either Speed Controller or Tapping. But once speed is set, previous setting disappear.

*2 Even Sub-mode is selected by Control Switch, Main mode (left side) appears at the Change of Effect Mode, as default.